


ENGENIOUS WI-FI ROUTER



ENGENIOUS WI-FI ROUTER CONFIGURATION PREPARATION:

In addition to a Engenious router with its power source, you will need a laptop with an Ethernet connectivity test preloaded, an Ethernet cable and a paper clip.

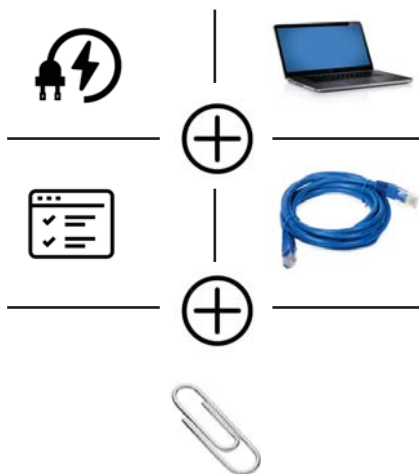

SET-UP INSTRUCTIONS:

1. CONNECT & POWER UP THE ROUTER

2. CONNECT TO LAPTOP

Connect the Router to your Laptop via an Ethernet cable

3. DISABLE WIRELESS CARD ON LAPTOP

Disable the Wireless card on your laptop and **open up a browser** (Chrome, Firefox, etc.)

4. ENTER NUMBERS

Type in the browser **192.168.0.1**

5. SELECT EXPERT MODE

Select **Expert Mode** to display the Login Page

6. ENTER PASSWORD

Type in the default password: **admin** and click Login

7. CHOOSE SYSTEM

Click on **System**

8. OPERATION MODE

Click on **Operation Mode** and Select **Client Bridge** in the drop down menu and click Apply

9. WAIT FOR BRIDGE MODE

Wait for the router to configure to **Client Bridge Mode**

10. CHOOSE WIRELESS.

Click on **Wireless** and then click on **Basic**

11. CHOOSE SITE SURVEY¹¹.

Click on **Site Survey** and click on **Apply**

12. VIEW AVAILABLE NETWORKS

The router will present a list of all the networks available in the area in a table

13. CHOOSE A NETWORK

Select the **Network** you want to connect to and scroll down the page to click on **Add to AP Profile**

14. ENTER THE WI-FI NETWORK PASSWORD (IF PROMPTED) & CLOSE

If a password is required you'll be presented with a blank window named **Pre-shared Key**; Type in the password and click **Save**

Click on Close

15. SELECT YOUR NETWORK AGAIN ON AP PROFILE TABLE

You'll now be presented with an **AP Profile Table** that shows you the **network** you selected and the option to select it again.

Select it again by checking the last box and click on **Connect**.

16. CONFIRM YOUR ROUTER CONNECTION

The Router should connect to the network

17. IF NOT CONNECTED, PRESS WPS BUTTON

If the router says "**Connection Status Failed**," reset the router by pressing on the **WPS button** (the only button on top of the device) for 15 seconds and restart the process.

If it fails again, contact VisitorFun

18. CONFIRM CONNECTION ON LAPTOP, THEN CONNECT TO MEDIA PLAYER AND CONFIRM MAPS, E-MAIL AND TEXT MESSAGE FUNCTIONS ARE WORKING:

If the connection status is successful open a browser on your laptop and browse a website; if successful, disconnect the Ethernet cable from the laptop, connect it to the Media Player and restart the Media Player.

If it picks up an IP, make sure you **check the maps** and **send an email or text message**.