

Cisco Linksys WET610 & WES610



1. Connect power & Ethernet cords into Linksys device
2. Connect other end of Ethernet cord into laptop
3. Disconnect from any Wi-Fi connections on laptop, or disable Wi-Fi
4. Reset your Linksys with a paper clip, hold down for approximately 10 seconds
5. Wait 1-3 minutes until lights on Linksys are solid
6. Open up a browser on your laptop, preferably Chrome or Firefox
7. Type in **169.254.1.250** in the address bar and press enter
8. When prompted, leave the user name blank, and enter “admin” as password
9. When web interface page appears, click on **Wireless** Tab
10. Click on **Wireless Site Survey** Tab and wait for networks available to load

Wireless	Setup	Wireless	Administration	Status
	Basic Wireless Settings	Wireless Network Site Survey	WMM®	Advanced Wireless Settings
Wireless Network Site Survey				
Number of Wireless Networks: 18				
Select	Wireless Network Name	GHz	Signal	Security
<input type="radio"/>	IED-Sciesa	2.4	0%	WPA2 Enterprise
<input type="radio"/>	Studio Legale	2.4	0%	WPA2 Personal
<input type="radio"/>	FASTWEB-1-001D8B480D58	2.4	25%	WPA Personal

11. Connect to designated network with the highest percentage, i.e. HHONORS – 60%
12. If successful, a “Connected” page will be displayed

If a “Connected” page does not appear follow directions below.

1. Repeats steps 4-10 above
2. Connect to a network with the second highest percentage
3. If still not successful, try the third, and fourth percentage
4. Call Ettractions after the fourth unsuccessful try